



# BAUER ENGINEERING

G. M. B. H.

ENGINEERING MAKES THE DIFFERENCE

CLERMONT-FERRAND-ALLEE 36

D-93049 REGENSBURG

TEL 0941/29638 – 0, FAX – 80

EMAIL info@bauer-eng.de

INTERNET <http://www.bauer-eng.de>

## POFA3 (Plastic Optical Fiber Attenuator 3<sup>th</sup> generation)

Operation Manual - **Version 1.2**, Date: 26.01.2007

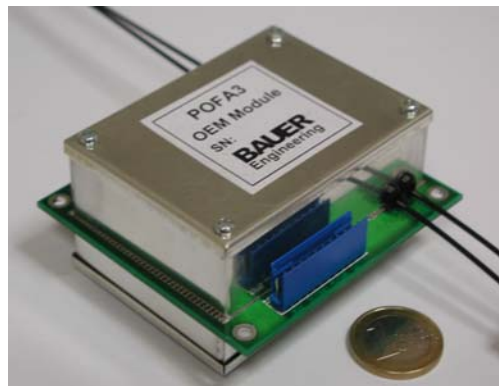


Fig.1a: OEM module (Original Equipment Manufacturer) module

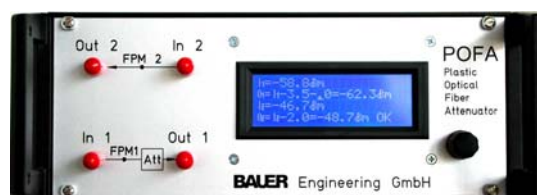


Fig.1b: Device version 19/2" 2U front connectors


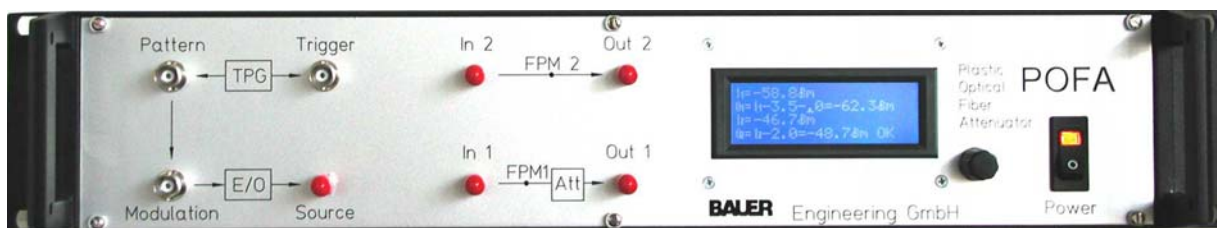


Fig.1c: Device version 19" front connectors version with PG and E/O

 

## Contents

POFA3 (Plastic Optical Fiber Attenuator 3 <sup>th</sup> generation)	1
0. Declaration of Conformity	4
1. Safety	4
2. Warranty	5
2.1 Restriction of warranty	5
3. Introduction	7
4. Function diagram	8
5. Instrument attenuation offset definition	9
6. Calculation of optical output power	11
6.1 Summary of symbols	11
6.2 Equations	11
7. Manual control	12
7.1 Menu flow diagram	13
8. RS232 communication	14
8.1 RS232 chain concept	14
8.1.1 Devices connection	14
8.1.2 OEM connection	14
8.2 RS232 settings	16
8.3 RS232 command structure	17
8.4 RS232 command summary	18
8.5 RS232 examples of commands	19
9. I2C Communication (for OEM)	22
9.1 I2C Specifications	22
9.2 I2C message format	22
9.3 I2C communication format	22
9.4 I2C command summary	23
10. Table of error codes	23
11. Specification	25
11.1 Attenuator specification	25
11.2 FPM specification	25
11.3 Additional options	26



11.4 Calibration	26
12. Technical data	27
12.1 Device technical data	27
12.2 OEM technical data	27
12.3 OEM interface pinning	27
13. Switch option	29
13.1 Local control	29
13.2 Remote control (command)	29
13.3 Examples	29
14. Power meter option	30
Calculation of input light power	30
15. Service instructions	31
15.1 Service menu	31
16. Trouble shooting	33

## 0. Declaration of Conformity



The manufacturer,

**BAUER Engineering GmbH**

**Clermont-Ferrand-Allee 36**

**930 49 Regensburg, Germany**


declares, that the measuring instrument, as described in operating manual, conforms with European standards as follows:

EMC: EN55022 (1991), Group 1, Class B  
EN50082-1 (1992) / IEC 801-4

The product herewith complies with the requirements of EMC Directive 89/336/EEC and CE markings have been affixed on the devices accordingly.

Date: 15.09.2005

Autograph:

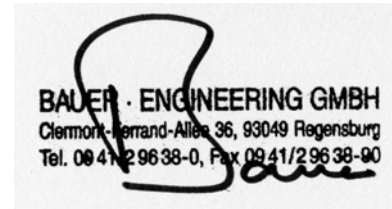

## 1. Safety

### Attention!

All statements regarding safety of operation and technical data in this instruction manual will only apply when the unit is operated correctly.

Before applying power to your POFA system, make sure that the protective conductor of the 3 conductor mains power cord is correctly connected to the protective earth contact of the socket outlet!

Improper grounding can cause electric shocks with damages to your health or even death!

## 2. Warranty

**BAUER Engineering GmbH** warrants material and production of the measuring instrument modules for a period of 6 months starting with the date of shipment. During this warranty period **BAUER Engineering** will see to defaults by repair or by exchange if these are entitled to warranty.

For warranty repairs or service the unit must be sent back to **BAUER Engineering**. The customer will carry the shipping costs to **BAUER Engineering**, in case of warranty repairs **BAUER Engineering** will carry the shipping costs back to the customer.

If no warranty repair is applicable the customer also has to carry the costs for back shipment.

In case of shipment from outside EU duties, taxes etc. which should arise have to be carried by the customer.

**BAUER Engineering** warrants the hard- and software determined by **BAUER Engineering** for this unit to operate fault-free provided that they are handled according to our requirements. However, **BAUER Engineering** does not warrant a fault- free and uninterrupted operation of the unit, to soft- or firmware for special applications nor this operation manual to be error free.

**BAUER Engineering** is not liable for consequential damages.

### 2.1 Restriction of warranty

The afore mentioned warranty does not cover errors and defects being the result of improper treatment, software or interface not supplied by us, modifications stated by us or unauthorised maintenance.

Further claims will not be consented to and will not be acknowledged. **BAUER Engineering** does explicitly not warrant the usability or the economical use for certain cases of application.

**BAUER Engineering** reserves the right to change this operating manual or the technical data of the described unit at any time.

### 3. Introduction

This manual is provided as a help in operating the POFA (**P**lastic **O**ptical **F**iber **A**ttenuator) device. POFA is a stand-alone instrument that makes it possible to adjust light attenuation, to measure the light input power and to calculate the optical output power (Fig.2). The attenuation is set according to the calibration table. POFA can be controlled manually or by a remote interface (RS232).

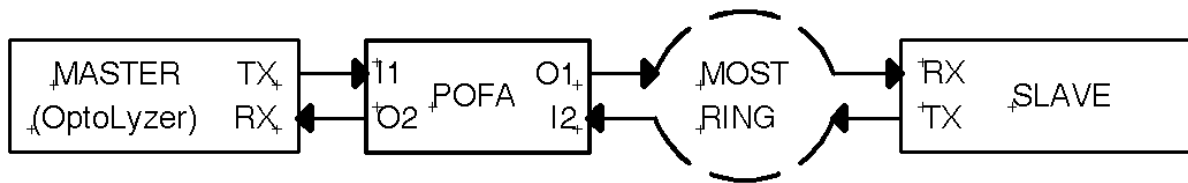


Figure 2: Application example

## 4. Function diagram

POFA3 is composed of the attenuator, a fiber power meter (FPM), a microcontroller and a power supply (Fig.3). The light goes from the input connector through FPM and attenuator to the output connector. The attenuator consists of a variable rotated filter and precise rotated actuator. The interface unit (IU) attends to the user interface, the POFA control and the remote communications. The IU is composed of a LCD and a turn/push knob.

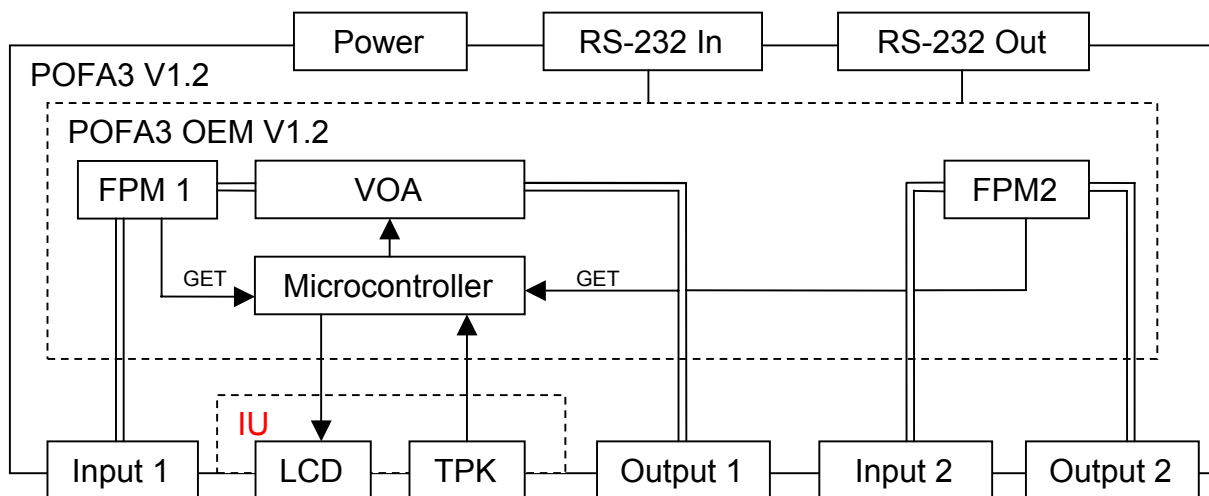


Figure 3: Function block diagram

FPM = Fibre Power Meter

IU = Interface Unit

LCD = Liquid Crystal Display

TPK = Turn Push Knob

VOA = Variable Optical Attenuator

## 5. Instrument attenuation offset definition

The instrument attenuation offset (IAO) includes all losses in the light pathway (Fig.4) for attenuation 0,0 dB of course.

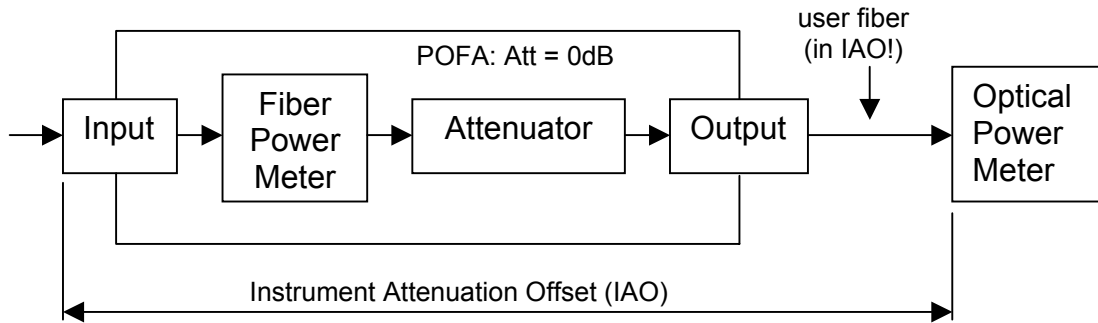


Figure 4: The instrument attenuation offset

The light losses are composed of the two connectors (Input, Output), FPM, Attenuator (att) and the user fiber.

In the application, it's important to know, how much light power is on the end of the fiber. This means that **the IAO value must include the user output fiber**. The IAO offset value should include the offset value of the user fiber (Fig.5). The value in the delivery device is pre-set by **BAUER Engineering**. An instrument offset **for both channels** can be set from 0 dB up to 25,5 dB.

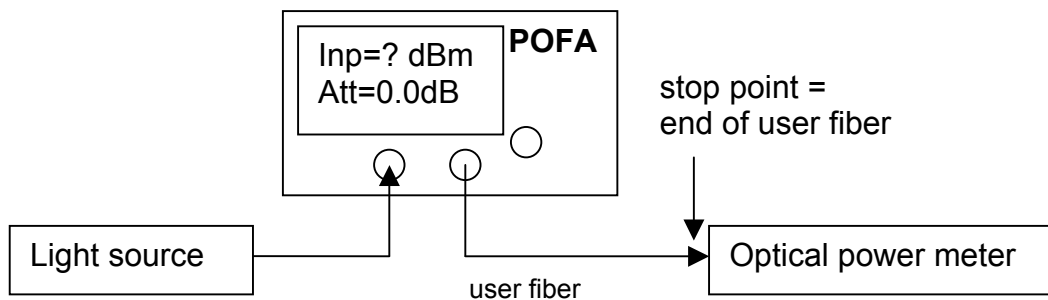


Figure 5: Measure of the IAO

For determination of the instrument attenuation offset you need to connect an LED light source to the POFA input connector and the optical power meter to the end

of the user fiber. Set the attenuation to 0 dB. The input light power is displayed on the display of POFA (Inp). The output light power is measured by the light power meter. The difference between output and input power is the IAO (Eq.5.1). Set this value to the POFA.

### Calculation of the IAO

$$\text{IAO1 [dB]} = \text{input power 1 (I1) [dBm]} - \text{Output power 1 (O1) [dBm]}, \text{Att} = 0\text{dB} \quad (5.1)$$

$$\text{IAO2 [dB]} = \text{input power 2 (I2) [dBm]} - \text{Output power 2 (O2) [dBm]} \quad (5.2)$$

## 6. Calculation of optical output power

Attenuation can be set from 0 dB up to 40,0 dB and is always positive. The mean value of the input light power is read every half a second from the FPM.

### 6.1 Summary of symbols

Att [dB]	0.0 ~ +40.0	Attenuation (always positive)
IAO [dB]	0.0 ~ +25.5	Instrument Attenuation Offset (always positive)
I1 [dBm]	-20.0 ~ +10.0	Input Power for the channel 1
I2 [dBm]	-30.0 ~ +10.0	Input Power for the channel 2
O1 [dBm]	see Eq.6.3	Output Power for the channel 1
<b>O2 [dBm]</b>	<b>see Eq.6.4</b>	<b>Output Power for the channel 2</b>

### 6.2 Equations

The total attenuation consists of adjusted attenuation and calibrated offset.

$$\text{ATTENUATION [dB]} = \text{Att [dB]} + \text{IAO [dB]} \quad (6.1)$$

The maximal output power equals the sum of the input power and total attenuation.

$$\text{Output [dBm]} = \text{Input [dBm]} - \text{ATTENUATION [dB]} \quad (6.2)$$

Use equations (6.1) in equation (6.2).

$$\text{O1 [dBm]} = \text{I1 [dBm]} - (\text{Att [dB]} + \text{IAO1 [dB]}) \quad (6.3)$$

$$\text{O2 [dBm]} = \text{I2 [dBm]} - \text{IAO2 [dB]} \quad (6.4)$$

## 7. Manual control

After power on the firmware information device address and baud rate are displayed, comes the main window with the stored attenuation. All informations are displayed on the LCD (Fig.6) and are updated every half a second. The user can control the attenuation value according to the increment value  $\langle 0,1;10,0 \rangle$  by turning the knob. After 1,5 seconds (Control time out) the desired attenuation set and "BUSY" message will be displayed. If the attenuation is reached, the "OK" message will be displayed.

To change other values the user must select the desired setting item in the menu (Fig.7). In order to enter the menu click down the control knob. Turn the knob until the desired value is selected and click down to enter the selection.

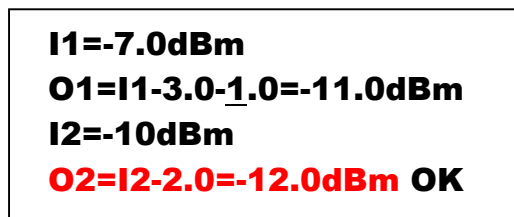


Fig.6: Main window

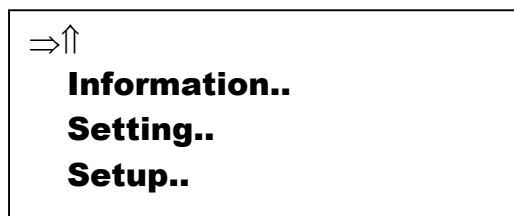


Fig.7: Menu window

### 7.1 Menu flow diagram

For menu orientation see this flow diagram (Fig.8) below.

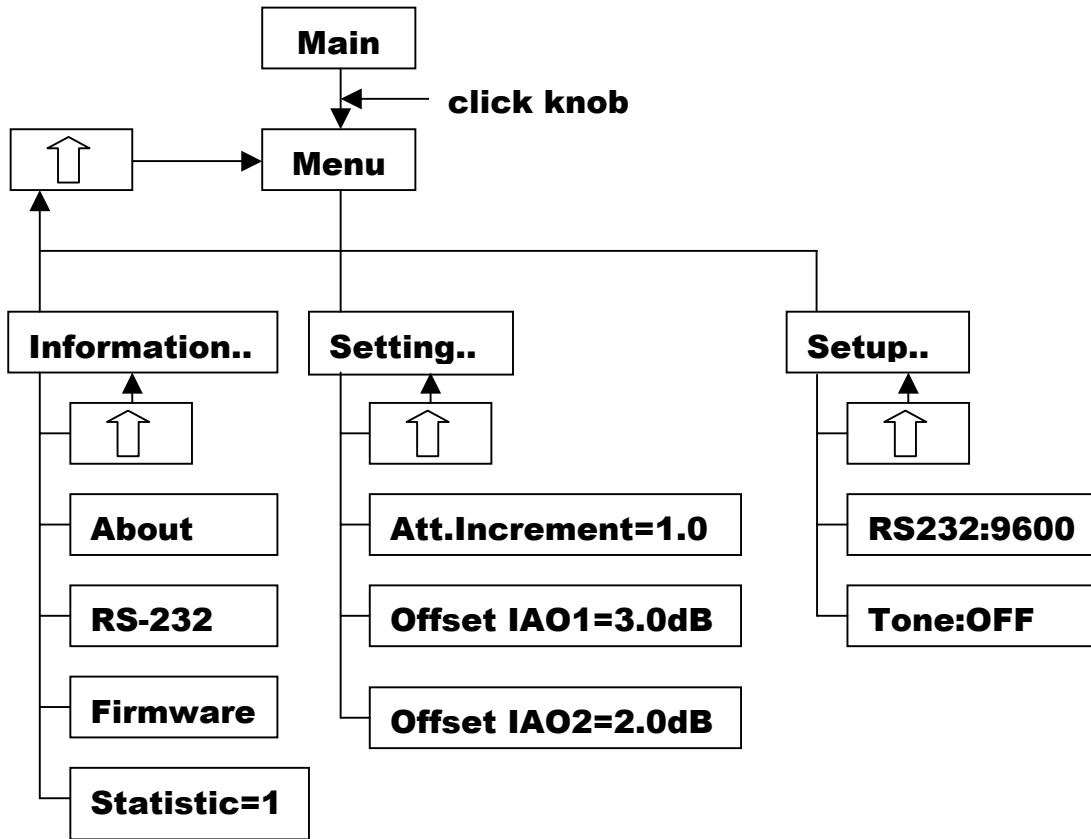


Figure 8: Flow diagram of the menu

## 8. RS232 communication

### 8.1 RS232 chain concept

The standard RS232 connection allows to connect one device to the personal computer (PC) COM port, only. The next device needs an additional COM port.

The chain concept makes it possible to connect more devices to a single COM port of the PC (Fig.9).

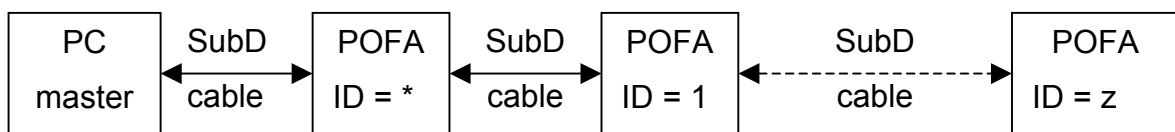


Figure 9: RS232 chain concept

Each device (POFA, FPM, Scanner, ...) has its own identification address (ID) and two separated COM ports. All messages have recipient and transmitter addresses char. The ID Address char is adjustable in the service menu and displayed on the LCD after power on. The two COM ports functions as a repeater, if the message has a different recipient ID.

#### 8.1.1 Devices connection

Connection is realised with a 1:1 female : male SubD-9pin cable (see Fig.10).

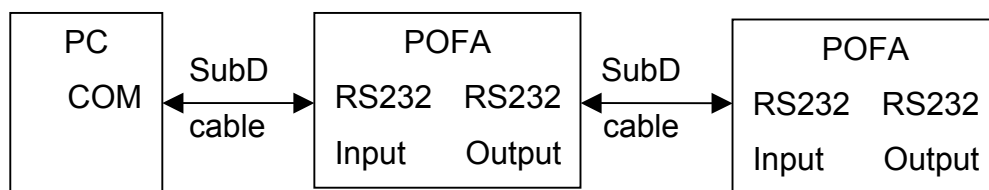


Figure 10: POFA connection

#### 8.1.2 OEM connection

Connection between the PC and the first module is realised with a SubD cable (Fig.11).

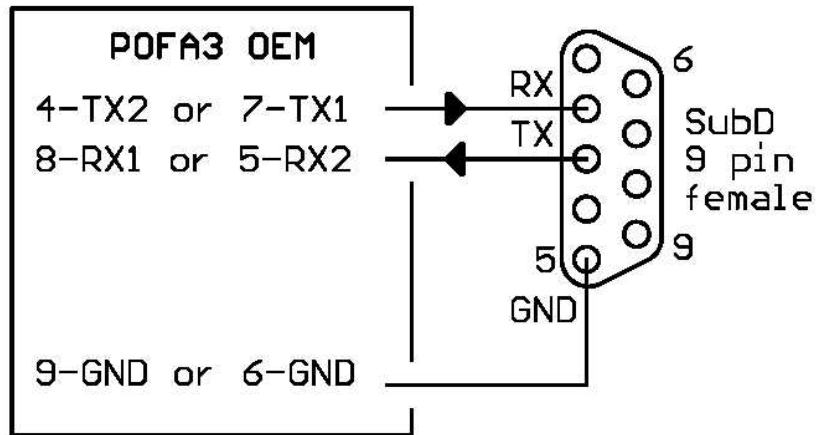


Figure 11: SubD Cable

Connection between two POF modules (POFA3 OEM) is realised with a null modem cable (Fig.12).

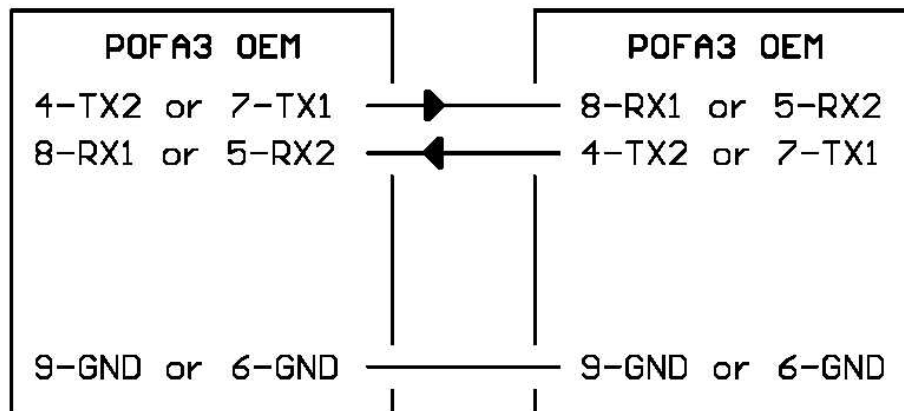


Figure 12: Null modem cable

## 8.2 RS232 settings

Baud rate: 9600 or **38400**  
 Stop bit: 1  
 Data bits: 8  
 Parity: no  
 Handshake: no  
 Cable: 1:1

For the communication the Hyperterminal program could be used, which is integrated in the Windows operation system. See the correct port setting on figure 13 and the ASCII settings on figure 14.

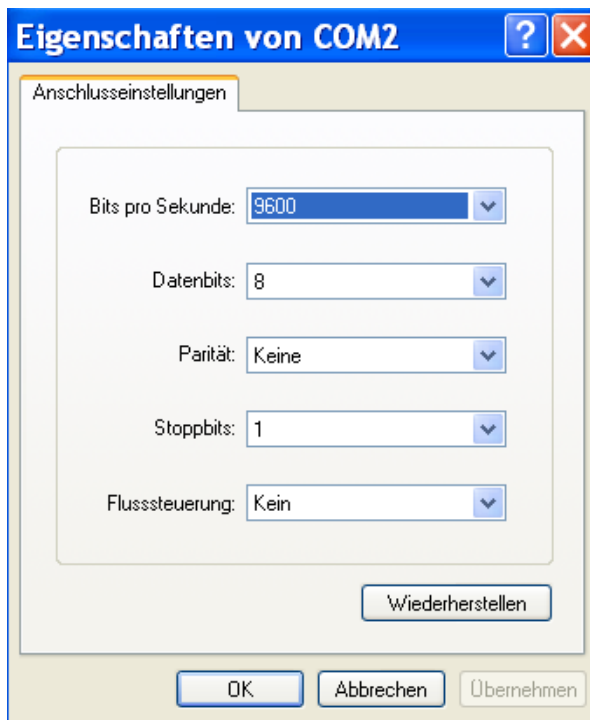


Figure 13: Port configuration

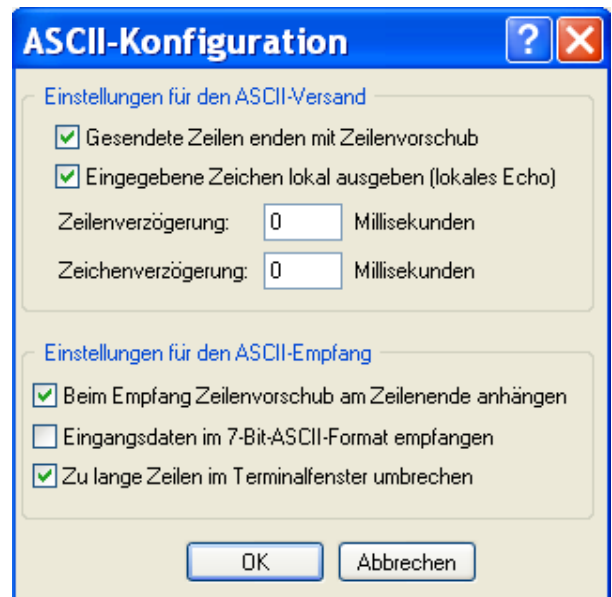


Figure 14: ASCII configuration

### 8.3 RS232 command structure

The previous version V1.1 is full compatible with this version V1.2.

Receiver ID char	Sender ID char	Command char	Operator char	Data string	Unit string	End of message char
'*'	'P'	'a'..'w'	':', '?', '='	'10.5'	'dB'	CR

**Receiver ID char =** this char indicates the receiver device address

'\*' = POFA3 **device** (compatibility with POFA2)

'1' = POFA3 **OEM**

**Sender char = 'P':** this char indicates who send the message (for example 'P')

**Command char:** the command char identifies the command (Command summary)

**Operator:** the operator indicates whether the selected value

- has to be written (':', followed by data)
- has to be read ('?', without data)
- is an answer on a read command ('=', with data)

**Data:** this field is filled with a data string, formatted accordingly to the command

**End of message:** CR is carriage return (=13 dec = 0D hex)

 
**The minimal delay between two sender messages is 50 ms!**

## 8.4 RS232 command summary

Description	Cmd char	Parameter	Operator char	Data (Range)	Units string
Attenuation	a	None	?, =, :	<0;40.0>	dB
Baud Rate	b	None	?, =, :	9600, 38400	
Service configuration	c	c = power check	?, =, :	0 = off (disable) 1 = on (enable)	
Echo	e	None	:	0 = off, 1 = on	
Light power	l	i = Input o = Output m = Monitor input O = Monitor Output	?, =		dBm
Serial number	n	None	?, =		
Offset (IAO1)	o	None	?, =, :	<0;25.5>	dB
Offset (IAO2)	O	None	?, =, :	<0;25.5>	dB
Status	s	a = Automatic response <sub>1</sub> t = Tell	?, =, :  ?, =	0 = OFF 1 = ON 'BUSY', 'OK' or <00;255> <sub>2</sub>	
Statistic <sub>3</sub>	t	None	?, =		
Temperature <sub>4</sub>	T	none	?, =	<10.00;50.00>	°C
Identify	IDN	None	?	Firmware string	
Reset <sub>5</sub>	RST	None	None	None	

### Remarks

1. If a = 1 and the attenuation is reached, the status message 'OK' is sent automatically.
2. If an error occurs, the error stack (see Error Table) is popped and sent.
3. Statistic of attenuator switchings
4. Temperature measurement option.
5. Device is reset after 0.8 second!



## 8.5 RS232 examples of commands

### Attenuation

Get or set the attenuation.

Set syntax	* P a : 10.1 dB CR
Response	No response

Get syntax	* P a ? CR
Response	P * a = 10.1dB CR

### Echo

Set or clear echo. If echo on, POFA sends characters back.

Set syntax	* P e : 1 CR
Response	No response

Get syntax	* P e : 0 CR
Response	No response

### Light power

Get light power from input or output. The output power is the power on the output connector calculated according to the equation (6.3).

Get syntax	* P l i ? CR
Response	P * l i = -10.1 dBm CR

### Serial Number

 
Get serial number.

Get syntax	* P n ? CR
Response	P * n = POF0510007 CR

### Offset 1 (IAO1)

Get or set the offset 1 (IAO1).

Set syntax	* P o : 3.5 dB CR
------------	-------------------



Response	No response
----------	-------------

Get syntax	* P o ? CR
Response	P * o = 3.5 dB CR

**Offset 2 (IAO2)**

Get or set the offset 2 (IAO2).

Set syntax	* P O : 2.5 dB CR
Response	No response

Get syntax	* P O ? CR
Response	P * O = 2.5 dB CR

**Status**

Get status.

Get syntax	* P s t ? CR
Response	P * s t = BUSY CR

Set automatic status if the attenuation is reached.

Set syntax	* P s a : 1 CR
------------	----------------

 
Response if the attenuation is reached.

Response	P * s t = OK CR
----------	-----------------

**Statistic of attenuator switchings**

Get the statistic of attenuator switchings.

Get syntax	* P s ? CR
Response	P * s = 123456 CR



### Identify

Device identify. POFA sends firmware version

Set syntax	* P IDN ? CR
Response	P * POFA3 V1.2

### Reset

Device remote reset.

Set syntax	* P RST CR
Response	No response

## 9. I2C Communication (for OEM)

### 9.1 I2C Specifications

Clock:	100 kHz
POFA3 address:	'1' = 0x31 (Read = 0x62, Write = 0x63)
Data string:	ASCII characters with end char (CR=0x0d)
Data length:	maximum 11 bytes

### 9.2 I2C message format

Address Bit 1..7	RW Bit 0	Cmd Char	Parameter Char	Data string	End Char
0x62,3	<0;1>	'a'..'s'	'i'	'105'	CR

### 9.3 I2C communication format

Master to Slave

Slave to Master

Write to the slave (POFA3)

START	Addr+ R	ACK	Cmd	ACK	Par	ACK	Data	ACK	CR	ACK	STOP
-------	---------	-----	-----	-----	-----	-----	------	-----	----	-----	------

Read from the slave (POFA3)

START	Address+ R	ACK	Cmd	ACK	Par	ACK	CR	ACK
-------	------------	-----	-----	-----	-----	-----	----	-----

START	Address+ <b>W</b>	ACK	Data	ACK	...	ACK	CR	ACK	STOP
-------	-------------------	-----	------	-----	-----	-----	----	-----	------

## 9.4 I2C command summary

Description	Read Write	Cmd Char	Parameter	Data (Range)
Attenuation	R, W	'a'	none	<0;400> <sub>1</sub>
Light Power	R	'l'	i = input o = output m = monitor input <b>O = monitor output</b>	<-500;100> <sub>1</sub>
Offset (IAO1)	R, W	'o'	none	<0;255> <sub>1</sub>
<b>Offset (IAO2)</b>	<b>R, W</b>	<b>'O'</b>	<b>none</b>	<b>&lt;0;255&gt;<sub>1</sub></b>
Status	R	's'	t = tell	'BUSY', 'OK' or <0;255>
Identify (Firmware)	R	'IDN'	none	'POFA3 V1.0'
Reset	W	'RST'	none	<1> <sub>2</sub>

Remark:

 
1. Data: -200 = -20.0
2. All write commands have a number char on the end of a message (before CR).

## 10. Table of error codes

The microcontroller operating software checks the system and if anything is out of order, an error code is displayed.

### Part symbols:

EEPROM	Electrical Erasable Programmable Read Only Memory
I2C =	Inter Integrated Circuit (IIC => I <sup>2</sup> C)
LCD =	Liquid Crystal Display
OP_SYS =	Operation System
RS232 =	Recommended Standard 232



Error	Part	Error description
20	I2C	Arbitration lost
21	I2C	Arbitration lost in SLA+R/W as master
22	I2C	Arbitration lost in SLA+R/W
23	I2C	Command char out of range
24	I2C	Operation char out of range
25	I2C	Command parameter out of range
50	RS232	Port number out of range
51	RS232	Command character out of range
52	RS232	Operation character out of range
53	RS232	Command parameter out of range
54	RS232	Data out of range
55	RS232	Message length out of range
56	RS232	Receive message UART2 (RS232 Out) time out
57	RS232	Overrun error
63	OP-SYS	EEPROM data out of range
70	OP_SYS	Operation mode out of range
80	OP_SYS	LCD time out
81	OP_SYS	Move time out
82	OP_SYS	Move position check out of range

## 11. Specification

Control:	rotate/pushed knob
IAO (Instrument Attenuation Offset):	$\leq 4.0$ dB (FPM1 + ATT + POF&connectors loss)
Interface:	2x RS-232 (9600 or 38400 bps, 8 data, 1 stop, no parity)
Connector loss:	$\leq 1.0$ dB
Set time:	< 1 seconds

### 11.1 Attenuator specification

Attenuation principle:	grey filter
Attenuation range:	IAO + 0.0 ~ 40.0 dB
Insertion loss:	$\leq 2.0$ dB
Resolution:	0.1 dB
Accuracy:	$\pm 0.2$ dB (= $\pm 5\%$ in Watt)

### 11.2 FPM specification

Measure range:	FPM1: 0 ~ -20.0 dBm FPM2: 0 ~ -30.0 dBm
Insertion loss:	FPM1: $\leq 1.0$ dB FPM2: $\leq 2.0$ dB
Resolution:	0.1 dB
Accuracy:	$\pm 0.2$ dBm (= $\pm 5\%$ in Watt)

### 11.3 Additional options

Options below are possible only for device with width 19".

- integration of OptoLyzer4MOST
- PG = Pattern Generator with Trigger output (TTL)
- EOC = EO Converter (modulated LED source)
- SW = optical Switch for duplicating of optical I/O
- MPX = optical multiplexer (scanner) for multiply of optical I/O
- another customised electronics

### 11.4 Calibration

Recalibration is recommended after **1 year** or after **200 000 attenuator switchings**.

## 12. Technical data

### 12.1 Device technical data

Connectors:

Input 1, 2: FSMA (optional ST or BAUER MOST inserts)

Output 1,2: FSMA (optional ST or BAUER MOST inserts)

Dimension: 19/2": 235 x 135 x 370 mm

19": 455 x 135 x 370 mm

Fiber: Toray, NA = 0.5, index = step

1.0 mm POF: PFDU-CD 1001-23ABD or

0.5 mm POF: CWKG-501-10E (other specification!)

Operating temperature: 15 ~ 35 °C

Power supply: 100 ~ 240 VAC / 2A, 50 / 60 Hz

Weight: 4 kg

### 12.2 OEM technical data

Dimensions: 80 x 75 x 45 mm

Fiber: POF 980 / 1000 / 1520 μm (AMP/Tyco pigtail)

Power supply: 5 ± 0,1 V / 150 mA & 12 ± 0,1 V / 100 mA or

24 ± 0,2 V / 100 mA

Operating temperature: 15 - 35 °C

Weight: 150 g

### 12.3 OEM interface pinning

Interface (Fig.15) HE14 12 pin male (Farnell 281 695-3, female 428-648).

1. I2C/SDA	4. RS232/TX2	7. RS232/TX1	10. Power/+5V/0.15A (optional)
2. I2C/SCL	5. RS232/RX2	8. RS232/RX1	11. Power/+12V/0.15A
3. I2C/GND	6. RS232/GND	9. RS232/GND	12. Power/GND

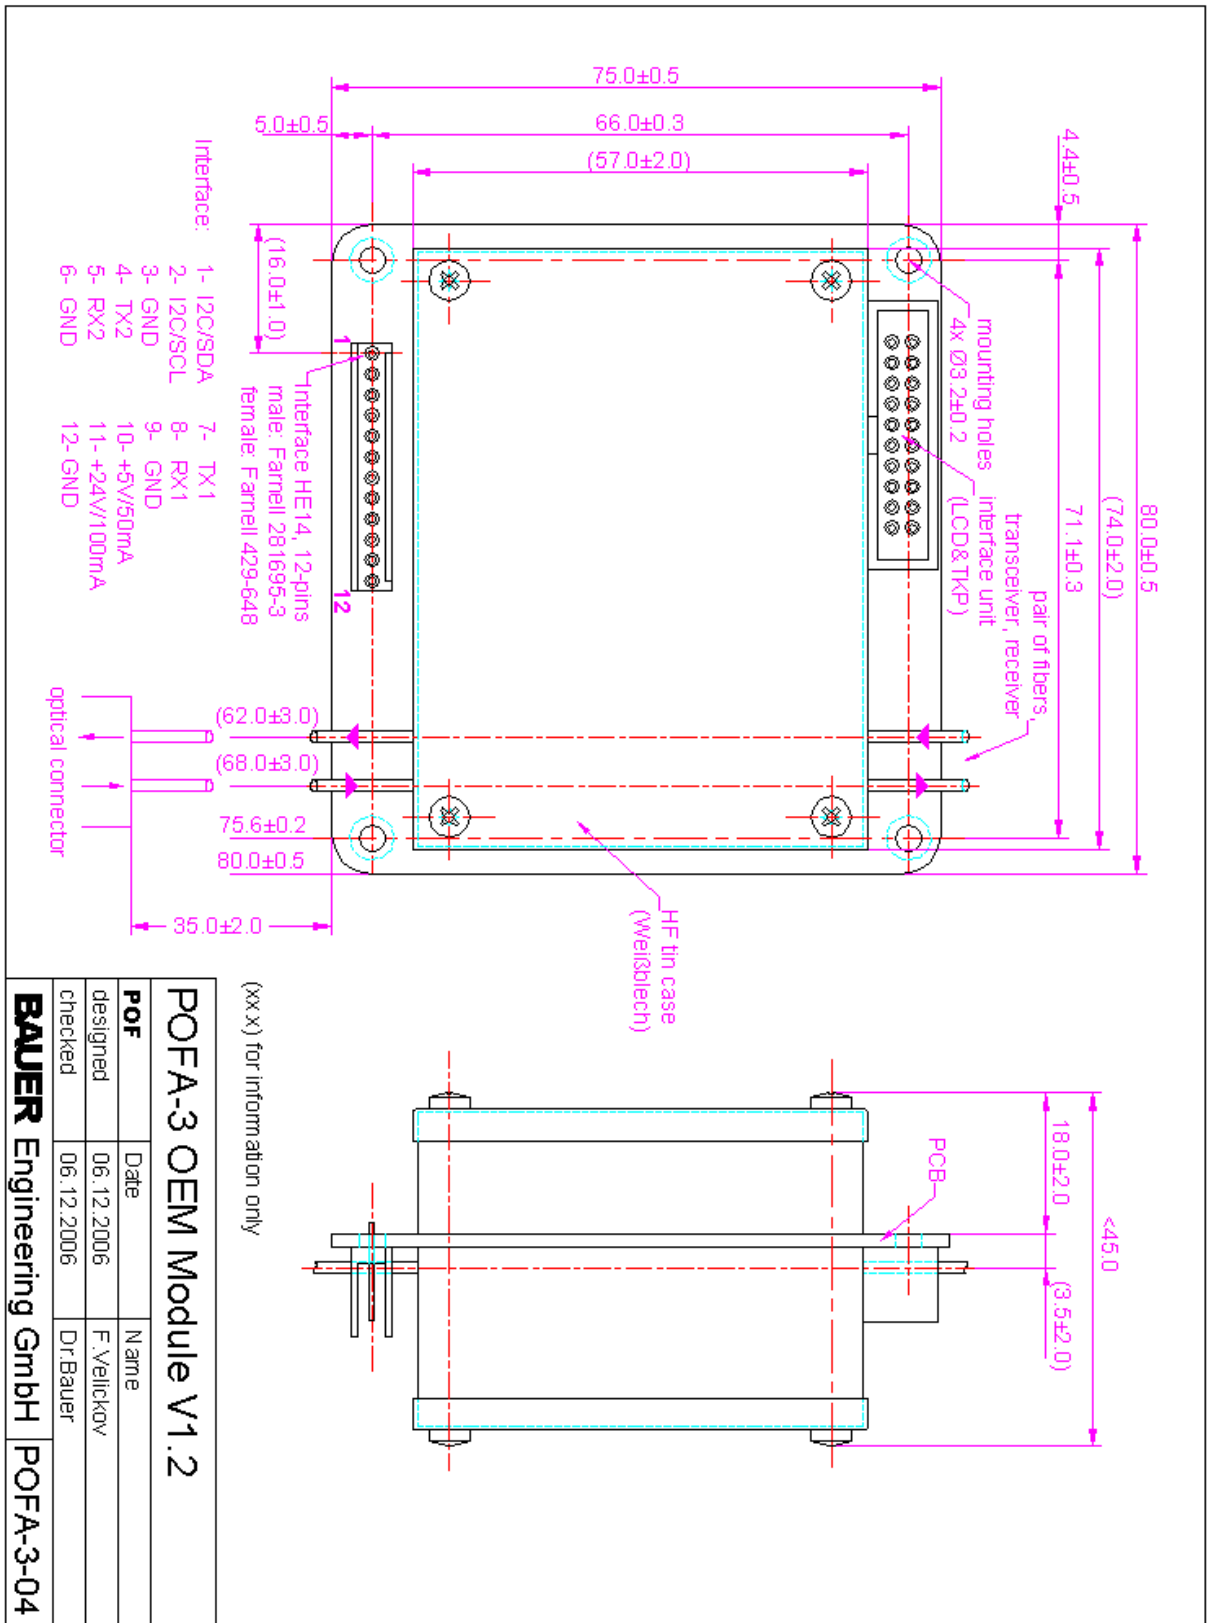


Fig. 15: Mechanical drawing

The specification is subject to change without notice.

## 13. Switch option

### 13.1 Local control

The position of the switch (A or B) is displayed on the LCD (Fig.16). The local control of the switch is implemented into the menu (Fig.17).

**I1=-7.0dBm**  
**O1=I1-3.0-1.0=-11.0dBm**  
**I2=-10dBm** **SW:A**  
**O2=I2-2.0=-12.0dBm OK**

Figure 16: Main window

**Information..**  
**Setting..**  
**Setup..**  
 ⇒ **Switch Position: A**

Figure 17: : Menu window

### 13.2 Remote control (command)

Description	Cmd char	Parameter	Operator char	Data (Range)	Units string
Digital I/O	'd'	None	'?', '=', ':'	1 = Position A 0 = Position B	None

### 13.3 Examples

#### Digital I/O

Change the switch position from A (default) to the B.

Set syntax	* P d : B CR
Response	No response

Get syntax	* P d ? CR
Response	* d = B CR

### 14. Power meter option

The second fiber power meter (FPM2) could be optional configured as power meter (PM2) (Fig.18).

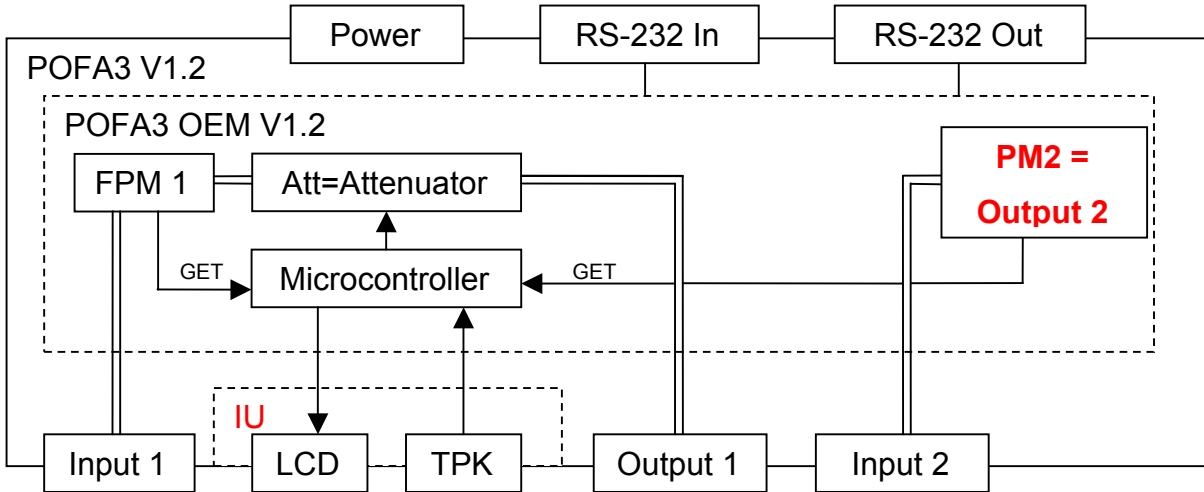


Figure 18: Function block diagram with PM

The attenuation offset (IAO2) in this configuration made it possible to adjust the input light power (I2) (14.1).

#### Calculation of input light power

$$I2 \text{ [dBm]} = O2 \text{ [dBm]} + IAO2 \text{ [dB]} \tag{14.1}$$

Second channel information (I2, O2) on the LCD are changed (Fig.19).

**I1=-7.0dBm**  
**O1=I1-3.0-1.0=-11.0dBm**  
**I2=O2+2.0=-8.0dBm**  
**O2=-10dBm** **OK**

Fig.19: Main window

## 15. Service instructions

This part deals with configuration possibilities of POFA device.

### 15.1 Service menu

Enter the service menu by pushing the control knob for more than 5 seconds

**The bold entries are the default settings.**

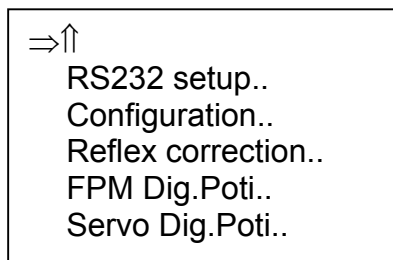


Figure 20: Service menu window with default setting

**RS232 Setup** = RS-232 communication setup

**Device Address** = Device address ID char (see chap. Remote commands) = “\*”

**Sender ID char** = **ON (POFA3 mode)** / OFF (POFA2 mode)

**Configuration** = System configuration

**Displ. Pos** = Display Calibration Position (for internal needs) = **OFF** / ON

**Opt.Switch** = Optical Switch (see chapter Switch update) = **OFF** / ON

**Power check** = Power OFF check for the statistic feature = **ON** / OFF

**Displ. FPM2** = Display FPM2 values (I2=..., O2=...) = **ON** / OFF

**Reflex correction** = Input 1 light power reflex correction from the attenuator

**I1-0.1 by Att < 2.5** = attenuation break point for I1 – 0.1dB correction

**I1-0.2 by Att < 1.4** = attenuation break point for I1 – 0.2dB correction

**I1-0.3 by Att < 0.1** = attenuation break point for I1 – 0.3dB correction

**I1-0.4 by Att < 0.0** = attenuation break point for I1 – 0.4dB correction

**FPM Dig.Poti** = Fiber Power Meter digital potentiometer setting

**FPM1 Gain** = 128

**FPM1 Offset** = 128

**FPM2 Gain** = 128

**FPM2 Offset** = 128

**Servo Dig.Poti** = Servo digital potentiometer setting

**Servo Check** = OFF / ON

**Servo Gain** = 128

**Servo Offset** = 128

For menu orientation see the diagram below.

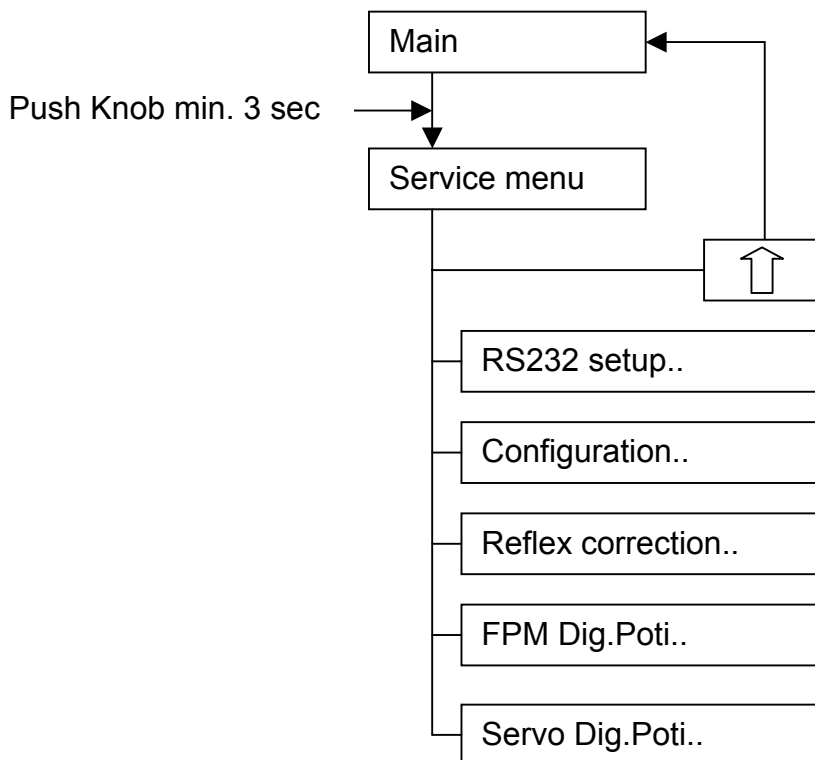


Figure 21: Service menu diagram

## 16. Trouble shooting

Trouble shooting	Problem	Solution
POFA device doesn't answer.	Address (receiver ID char)	POFA device = '*', please check the setting in service menu. OEM = '1'
	Sender ID setting	Communication mode POFA3/2.
	Baud rate	Check the baud rate setting
	Cable	1:1, female : male
On the LCD "Power OFF" occur	Low power supply or power supply noise	Set the Power check in the service configuration to the OFF.
Not described trouble shooting.		Please contact the manufacturer <b>BAUER Engineering</b>